Sonofresco Coffee Roaster


One Pound (CR1) Pre-2014 Models

Read and understand these instructions before attempting the gas valve replacement.

- DISCONNECT APPLIANCE FROM ELECTRICAL POWER SOURCE BEFORE PERFORMING ANY WORK.
- DISCONNECT APPLIANCE FROM GAS SUPPLY BEFORE PERFORMING ANY WORK.

Suggested Tools:

- #2 Phillips screwdriver (Phillips bit mounted in a drill works best)
- 1/8" Allen hex wrench
- 5/32" Allen hex wrench (hex bit mounted in a drill works best)
- 5/8" box end wrench

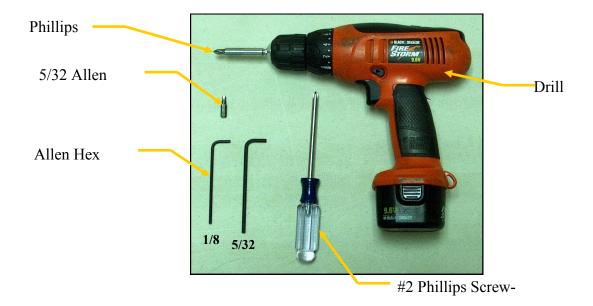



Valve Assembly


Sonofresco Coffee Roaster

One Pound (CR1) Pre-2014 Models

Disconnect power to the roaster.



Remove six (6) brass screws from chrome top plate using Phillips screwdriver.

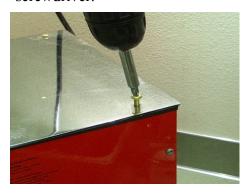

Remove two (2) screws to remove the control board.



Disconnect gas supply to the roaster.



Remove lift handle using a 1/8" Allen hex wrench.



Remove twelve (12) screws from ushape (6 per side) using Phillips screwdriver.



Sonofresco Coffee Roaster

One Pound (CR1) Pre-2014 Models

Unplug the white and red wires



Remove four (4) screws from bottom plate, using a 5/32" Allen hex bit, to separate the gas valve



Assemble the gas valve assembly to the bottom plate with four (4) screws using a 5/32"




Loosen the compression nut



Remove the gas valve from the roaster assembly and reinstall the new gas valve in the reverse order.



Tighten the compression nut

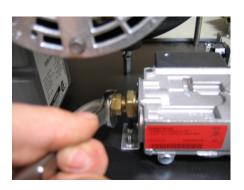

Sonofresco Coffee Roaster

One Pound (CR1) Pre-2014 Models

Reassemble wall to bottom plate with four (4) screws using the 5/32" Allen hex bit. Do Not Over Tighten.



Install the u-shape by inserting the panel into the lower extrusion starting on the left side of the unit. Install three screws to hold U-shape in place.



Reinstall twelve (12) screws to secure u-shape using Phillips screwdriver. Do Not Over tighten screws.




Reattach wires to gas valve assembly as shown in picture.



• Gradually insert u-shape into bottom extrusion all the way around to the right hand side. Ensure that the u-shape is properly seated.



• Ensure that top plate gasket is in place and properly centered the around brass bushings. Reinstall top extrusion on to top of u-shape.

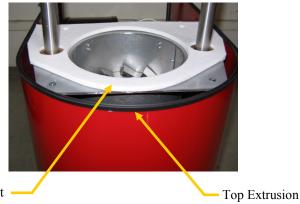

Top plate gasket

4046068-B


Sonofresco Coffee Roaster

One Pound (CR1) Pre-2014 Models

Install two (2) screws to secure control board to u-shape.



Install lift handle using a 1/8" Allen hex wrench.. Ensure that fastener is seated to hole in shaft.

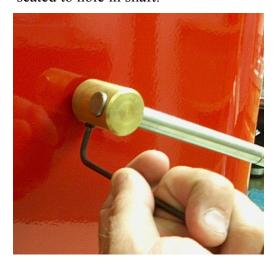

Install six (6) brass screws to secure chrome top plate using Phillips screwdriver.

